



SonicWall™ SonicOS 6.2.7.0

Beta Release Notes

February 2017

These release notes provide information about the SonicWall™ SonicOS 6.2.7.0 release.

Topics:

- [About SonicOS 6.2.7.0](#)
- [Supported Platforms](#)
- [New Features](#)
- [Resolved Issues](#)
- [Known Issues](#)
- [System Compatibility](#)
- [Product Licensing](#)
- [Upgrading Information](#)
- [SonicWall Support](#)

About SonicOS 6.2.7.0

SonicWall™ SonicOS 6.2.7.0 provides important new features and fixes many known issues found in previous releases. For more information, see the [New Features](#) and [Resolved Issues](#) sections.

Supported Platforms

SonicOS 6.2.7.0 is supported on the following SonicWall appliances:

- | | | |
|---------------------|------------|--------------------------|
| • SuperMassive 9600 | • NSA 6600 | • TZ600 |
| • SuperMassive 9400 | • NSA 5600 | • TZ500 / TZ500 Wireless |
| • SuperMassive 9200 | • NSA 4600 | • TZ400 / TZ400 Wireless |
| | • NSA 3600 | • TZ300 / TZ300 Wireless |
| | • NSA 2600 | • SOHO Wireless |

New Features

This section describes the new features introduced in SonicOS 6.2.7.0.

Topics:

- [High Availability](#)
- [PPPoE Unnumbered Interface Support](#)
- [Vendor OUI Detection and Logging](#)
- [Dell X-Series Switch Integration Features](#)
- [DPI-SSH](#)
- [Support for pcapNG](#)
- [TSR FTP for Periodic Backup](#)
- [Custom Lists for Geo-IP and Botnet](#)
- [SIP UDP Fragmentation Fixes](#)
- [System Logs on AppFlow Server via IPFIX](#)
- [NAT64: Stateful NAT from IPv6 Client to IPv4 Server](#)
- [DNS Proxy](#)
- [FQDN Routing](#)
- [Maximum Routes Doubled](#)
- [Maximum Zone to Zone Access Rules Increased](#)
- [Flow Reporting using IPFIX Extension Version 2](#)
- [Syslog Server Profiling](#)
- [IPv6 Support](#)
- [DPI-SSL Increased Connection Counts and Enhancements](#)
- [Open Authentication Social Login](#)
- [SonicPoint Radius Accounting](#)
- [31-Bit Network](#)
- [RESTful API](#)
- [Biometric Authentication](#)
- [EasyVPN](#)

High Availability

SonicOS 6.2.7.0 introduces two new features in the area of High Availability:

- **HA support with Dynamic WAN interfaces**

In SonicOS 6.2.7.0, PPPoE can be enabled on interfaces in HA Active/Standby mode.

After the active unit connects to the PPPoE server, it synchronizes the PPPoE session ID and server name to the idle unit.

During a failover, the active unit terminates the PPPoE HA connection on the client side by timing out. The secondary unit then terminates the original connection on the server side and starts a new PPPoE connection.


When High Availability is enabled and one interface is configured as PPPoE Unnumbered, the following settings are required:

In the **High Availability > Settings** screen:

- Select the **Enable Virtual MAC** checkbox
- Clear the **Enable Preempt Mode** checkbox

In the **High Availability > Monitoring** screen:

- Select **Enable Physical/Link Monitoring**
- Set the **Primary** and **Secondary** IP address fields to 0.0.0.0
- Clear all other checkboxes

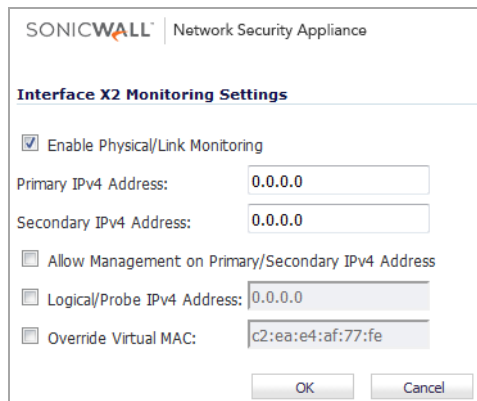

- **HA Stateful Synchronization support for DHCP**

DHCP can now be enabled on interfaces in HA mode. This feature is supported in both Active/Standby (non-stateful) and Stateful Synchronization mode.

Only the active unit can get a DHCP lease. It synchronizes the DHCP IP address along with the DNS and gateway addresses to the idle unit. The DHCP client ID is also synchronized, allowing this feature to work even without enabling Virtual MAC.

During a failover, the active unit releases the DHCP lease and the secondary unit renews the DHCP lease using the existing DHCP IP address and client ID as it becomes the active unit. The IP address does not change, and network traffic, including VPN tunnel traffic, continues to pass.

If the active unit does not have an IP address when failover occurs, the secondary unit starts a new DHCP discover.

PPPoE Unnumbered Interface Support

A PPPoE Unnumbered interface allows you to manage a range of IP addresses with only a single PPPoE connection. The Internet Service Provider (ISP) provides multiple static IP addresses that can be allocated within a subnet. The first address is designated as the network address, and the last one as the broadcast address.

Start by configuring the PPPoE client settings on a WAN interface:

The Unnumbered PPPoE interface is configured on a different interface:

- 1 For **Zone**, select **LAN**, **DMZ**, or create a new zone.
- 2 For **Mode / IP Assignment**, select **IP Unnumbered**.
- 3 For **IP Address**, enter the address provided by your ISP. Usually it is the second IP address assigned by the provider. The subnet mask is also assigned by the ISP.

Notes:

- The default MTU of PPPoE is 1492.
- To change X3 to another mode when X2 unnumbered to X3 is configured, first terminate the relationship with X2 by changing X2 to another mode. Otherwise, if you change the IP address or mask of interface X3, it causes X3 to reconnect to the PPPoE server.
- If X3 is set as unnumbered interface, other interfaces cannot connect to X3 using an L2 Bridge.

If High Availability is enabled, High Availability > Settings is configured as shown below with Unnumbered PPPoE:

High Availability / **Settings**

General HA Devices HA Interfaces

Mode:

Active / Standby

☐

Enable Stateful Synchronization

☐

Generate/Overwrite Backup Firmware and Settings When Upgrading Firmware


☐

Enable Preempt Mode

☒

Enable Virtual MAC

A sample network topology is shown below:

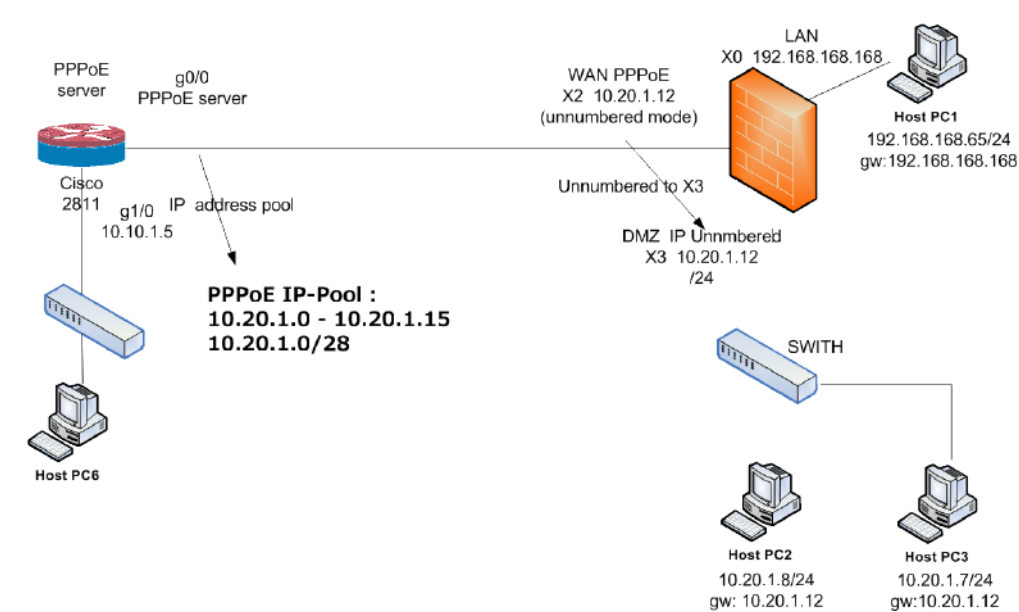

In this topology, X2 is the PPPoE unnumbered interface and X3 is an unnumbered interface.

| | | | | | | | | | |
|----|-----|------------------|------------|-----------------|------------------|------------|--------------------|---|------------------|
| X2 | WAN | Default LB Group | 10.20.1.12 | 255.255.255.240 | PPPoE | Disconnect | 1 Gbps Full Duplex | ✓ | Unnumber to X3 |
| X3 | DMZ | | 10.20.1.12 | 255.255.255.240 | Unnumber | | 1 Gbps Full Duplex | ✓ | Be X2 Unnumbered |
| X4 | DMZ | | | | PortShield to X3 | | 1 Gbps Full Duplex | ✓ | |
| X5 | DMZ | | | | PortShield to X3 | | No link | ✓ | |

SonicOS adds two routes:

| | | | | | | |
|----|-----------|-----------|-----|--------------------|----|----|
| 6 | Any | X3 Subnet | Any | 0.0.0.0 | X3 | 20 |
| 7 | Any | X0 Subnet | Any | 0.0.0.0 | X0 | 20 |
| 8 | Any | X1 Subnet | Any | 0.0.0.0 | X1 | 20 |
| 9 | X1 IP | Any | Any | X1 Default Gateway | X1 | 20 |
| 10 | X2 IP | Any | Any | X2 Default Gateway | X2 | 20 |
| 11 | X3 Subnet | Any | Any | 0.0.0.0 | X2 | 20 |

SonicOS also adds two NAT policies:

| | | | | | | | | |
|-----------------------------|-----------|----------|-----------|----------------|-----|----------|----|-----|
| <input type="checkbox"/> 18 | X3 Subnet | Original | Any | Original | Any | Original | X3 | X2 |
| <input type="checkbox"/> 19 | Any | Original | X3 Subnet | Original | Any | Original | X2 | X3 |
| <input type="checkbox"/> 20 | Any | Original | 10.20.1.3 | 192.168.168.65 | Any | Original | X2 | Any |

A manually added NAT policy would have settings such as:

General

Advanced

NAT Policy Settings

Original Source:

Translated Source:

Original Destination:

Translated Destination:

Original Service:


Translated Service:

Inbound Interface:

Outbound Interface:

Vendor OUI Detection and Logging

Every wired or wireless networking device has a 48-bit MAC address assigned by their hardware manufacturers. An organizationally unique identifier (OUI) is a 24-bit number that uniquely identifies a vendor, manufacturer, or other organization globally or worldwide. The first three octets of the MAC address are the OUI.

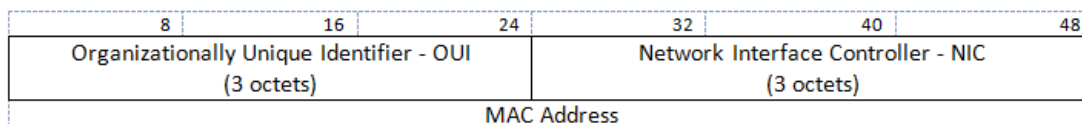

In SonicOS 6.2.7.0, this information is used to provide a **Vendor** column in the following tables:

- Dashboard > Connections Monitor
- Dashboard > Log Monitor
- Dashboard > AppFlow Monitor
- Network > ARP
- Network > Neighbor Discovery
- Network > MAC-IP Anti-spoof
- Network > DHCP Server
- Network > IP Helper
- Switching > L2 Discovery
- Switching > Link Aggregation
- VPN > DHCP over VPN
- Wireless > Status

- Wireless > IDS
- SonicPoint > Station Status
- SonicPoint > RF Analysis
- SonicPoint > IDS

Dell X-Series Switch Integration Features

SonicOS 6.2.7.0 provides several enhancements and new features for Dell X-Series integration:

- **PortShield and High Availability**

Dell X-Series integration previously supported SonicOS PortShield functionality in HA mode using Dedicated Uplink(s). In SonicOS 6.2.7.0, support for PortShield functionality in HA mode is available using Common Uplink.

In this configuration, a link between the active/standby firewall and the X-Series switch serves as a common uplink to carry all the PortShield traffic. In this configuration firewall interfaces which serve as PortShield hosts should be connected to a separate switch and not the same X-Series switch connected to the active and standby units. This is to avoid looping of packets for the same PortShield VLAN. The PortShield members can be connected to ports on the X-Series switch which is controlled by the active/standby firewall.

- **Single Point of Management over Common Uplink for VLAN Traffic**

Dell X-Series integration previously supported VLANs in a Dedicated Uplink configuration. In SonicOS 6.2.7.0, VLANs are also supported with Common Uplink. This allows a single link between the firewall and the X-Series switch to carry management traffic of the firewall managing the X-Series switch plus PortShield traffic for the *Interface Disambiguation via VLAN (IDV)* VLANs corresponding to the firewall interfaces plus traffic for the VLAN sub-interfaces present under the Common Uplink interface.

NOTE: Overlapping VLANs cannot exist under appliance interfaces configured as dedicated uplinks or common uplinks to the same switch. This is because the VLAN space is global on the X-Series switch.

NOTE: PortShield of Extended Switch Interfaces to Common Uplink Interfaces without selecting any VLANs for access/trunk configuration is not supported.

- **Increase X-Series Switch Maximum to Four**

In previous SonicOS releases, a SonicWall firewall could be provisioned for a maximum of two X-Series switches. In SonicOS 6.2.7.0, a maximum of four X-Series switches is supported. All four X-Series switches must be directly connected to the firewall appliance. Daisy-chaining of X-Series switches is not yet supported.

- **Support for SonicWall NSA and SuperMassive**

In SonicOS 6.2.7.0, support for the X-Series solution is extended to include SonicWall NSA and SuperMassive appliances, with the exception of the NSA 2600. The following SonicWall platforms are now supported:

- | | | |
|---------------------|------------|--------------------------|
| • SuperMassive 9600 | • NSA 6600 | • TZ600 |
| • SuperMassive 9400 | • NSA 5600 | • TZ500 / TZ500 Wireless |
| • SuperMassive 9200 | • NSA 4600 | • TZ400 / TZ400 Wireless |
| | • NSA 3600 | • TZ300 / TZ300 Wireless |

DPI-SSH

SonicOS 6.2.7.0 introduces the DPI-SSH feature. DPI-SSH inspects the data traversing the firewall in an SSH tunnel.

SSH, or Secure Shell, is a cryptographic network protocol for secure network communication and services between two networked computers. It connects, via a secure channel over an insecure network, a server and a client running SSH server and SSH client programs, respectively. SSH is not only a shell, but acts as a secure channel. It can provide different services over this tunnel, including shell, file transfer or X11 forwarding.

SonicOS supports SSH2. SSH1 sessions will not be intercepted and inspected. If the SSH1 banner message contains a non-conforming SSH version number, it will be treated as a bad protocol and dropped.

DPI, or Deep Packet Inspection, examines the data part (and possibly also the header) of a packet as it passes the SonicWall firewall. It searches for protocol non-compliance, viruses, spam, intrusions, or defined criteria to decide whether the packet may pass.

DPI-SSH decrypts incoming SSH packets and sends them to the DPI module for inspection. After completion of DPI inspection, it re-encrypts the packet again and sends the packet to the destination. If the data/packet does not pass the DPI inspection, DPI-SSH resets the connection.

DPI-SSH provides inclusion/exclusion criteria to inspect or bypass certain kinds of traffic. The SonicOS administrator can modify the criteria on the **DPI-SSH > Configure** screen.

DPI-SSH supports both route mode and wire mode. For wire mode, DPI-SSH is only supported in the secure (active DPI of inline traffic) mode. For route mode, there is no limitation.

DPI-SSH supports the following clients:

- SSH client for Cygwin
- Putty
- secureCRT
- SSH on Ubuntu
- SSH on centos
- SFTP client for Cygwin
- SCP on Cygwin
- Winscp

DPI-SSH supports the following servers:

- SSH server on Fedora
- SSH server on Ubuntu

DPI-SSH supports the following key exchange algorithms:

- Diffie-hellman-group1-sha1
- Diffie-hellman-group14-sha1
- ecdh-sha2-nistp256

Notes:

- If there is already an SSH server key stored in the local machine, it must be deleted. For example, if you already SSH to a server, and the server DSS key is saved, the SSH session will fail if the DSS key is not deleted from the local file.
- The ssh-keygen utility cannot be used to bypass the password.
- Putty uses GSSAPI. This option is for SSH2 only, which provides stronger encrypted authentication. It stores a local token or secret in the local client and server for the first time communication. It exchanges messages and operations before DPI-SSH starts, so DPI-SSH has no knowledge about whatever was exchanged before, including GSSAPI token. DPI-SSH will fail with the GSSAPI option enabled.


- On the client side, either the SSH 2.x or 1.x client can be used if DPI-SSH is enabled. However, clients with different version numbers cannot be used at the same time.
- Gateway Anti-Spyware and Application Firewall inspections are not supported even if these options are selected in the **DPI-SSH > Configure** screen.

Support for pcapNG


SonicOS 6.2.7.0 provides an option to export the pcapNG file on the packet monitor user interface. The pcapNG file can be directly opened by Wireshark and the new “Packet comments” section is displayed.

In previous releases, packet monitor export supports pcap, but the administrator must export pcap, HTML and text to find out the line number, in-interface, out-interface, and the function name which acted on the packet. This data is now available by exporting a single pcapNG file.

The Dashboard > Packet Monitor screen provides a new option to export the pcapNG file.

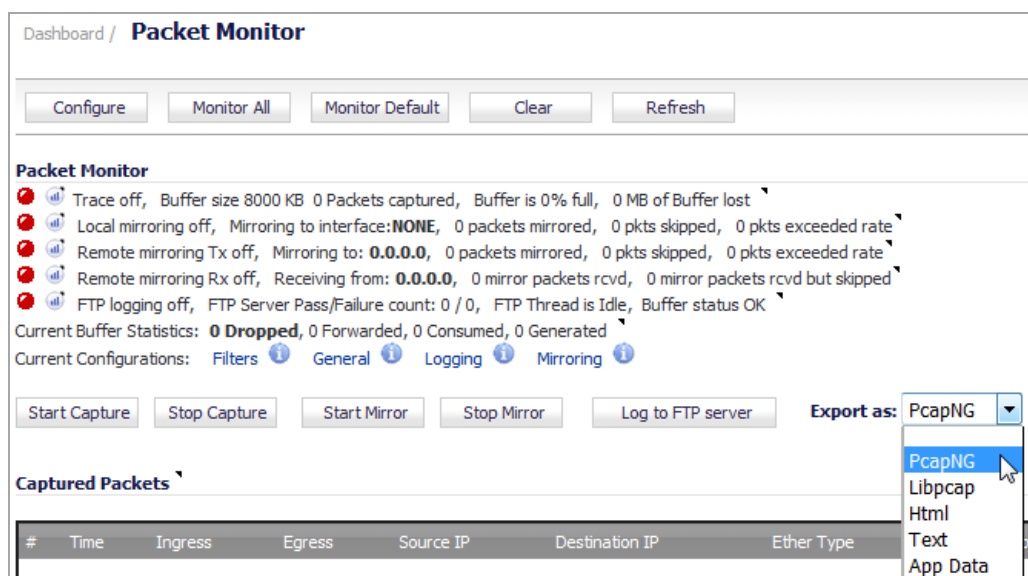

When the file is opened in Wireshark, the new Packet comments section is displayed.

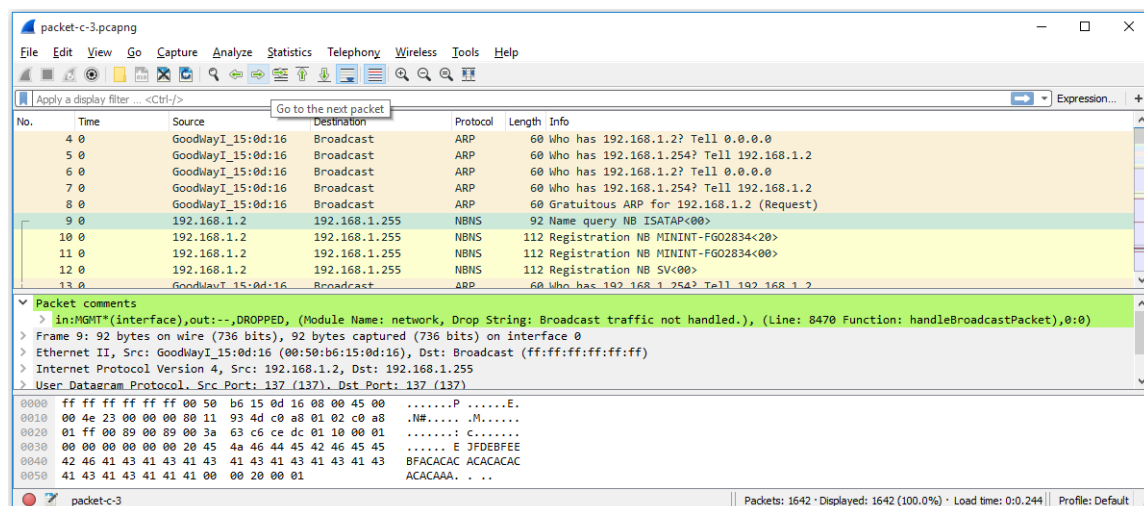

TSR FTP for Periodic Backup

This feature allows administrators to send the configuration settings (prefs) and tech support report (TSR) to a specified FTP server. Admins can configure a schedule for periodic backup of this information to the FTP server.

To enable scheduled prefs and TSR backups:

- 1 Navigate to the **System > Settings** page.
- 2 Click the **Send by FTP** button. The **Schedule Reports** page displays.



The screenshot shows the 'Schedule Reports' window. At the top is a 'Set Schedule' button. Below it is the 'Actions' section with two checkboxes: 'Send Tech Report by FTP' and 'Send Settings by FTP'. Under these are four input fields: 'FTP Server:' with the value '0.0.0.0', 'User name:' with 'admin', 'Password:' with 'password', and 'Directory:' with 'reports'. At the bottom are 'Apply' and 'Cancel' buttons.

- 3 Select the **Send Tech Report by FTP** checkbox to send TSR.
- 4 Select the **Send Settings by FTP** checkbox to send prefs.
- 5 Enter the required information for the FTP server.
- 6 Click the **Set Schedule** button to define a start schedule.
- 7 Click **OK** and then click **Apply**.

Custom Lists for Geo-IP and Botnet

SonicOS 6.2.7.0 provides new options to configure a custom country list for Geo-IP Filter and a custom botnet list for Botnet Filter.

An IP address can be associated with a wrong country. This kind of misclassification can cause incorrect/unwanted filtering of an IP address. Having a custom country list can solve this problem. The custom country list overrides the firewall country associated with a particular IP address.

Similarly, an IP address can be wrongly marked as botnet. A custom botnet list can override the botnet tag for a particular IP address.

The **Security Services > Geo-IP Filter** page is changed for this new feature, and has four tabs with various configuration settings on each.

Security Services / **Geo-IP Filter**

Settings Custom List Web Block Page Diagnostics

☐ Block connections to/from countries listed in the table below

☒ All Connections ☐ Firewall Rule-based Connections

☐ Block all connections to public IPs if GeoIP DB is not downloaded

☐ Enable Custom List

☐ Override Firewall Countries By Custom List

☐ Enable Logging

Countries

| Blocked Country |
|--|
| <input type="checkbox"/> Afghanistan |
| <input type="checkbox"/> Aland Islands |

The **Security Services > Botnet Filter** page is similarly changed for this new feature, also with four tabs.

Security Services / **Botnet Filter**

Settings Custom Botnet List Web Block Page Diagnostics

☐ Block connections to/from Botnet Command and Control Servers

☒ All Connections ☐ Firewall Rule-based Connections

☐ Block all connections to public IPs if BOTNET DB is not downloaded

☐ Enable Custom Botnet List

☐ Enable Logging

Botnet Exclusion Object:

Default Geo-IP and Botnet Exclusion Group

SIP UDP Fragmentation Fixes

In previous releases, the SIP transformation design and implementation does not handle fragmented SIP packets transported in UDP mode. A SIP/UDP signaling packet is fragmented when the SIP payload length is greater than the maximum MTU size of the network minus the size of the SIP packet headers. For example, for a commonly accepted maximum MTU size of 1514 bytes, if the SIP signaling packet payload length exceeds 1472 bytes, the SIP packet is dropped by SonicOS.

In SonicOS 6.2.7.0, SIP/UDP payload length is not restricted by the underlying MTU size on the network. This support is completely transparent to users. No configuration is required.

System Logs on AppFlow Server via IPFIX

In SonicOS 6.2.7.0, system logs can be sent to an external server via IPFIX packets and then saved into the database on the disk. The logs only include the ones which are reported WITHOUT connection cache. Users can edit the configuration in the Log > Settings page to indicate which log events should be sent.

System logs include events that are typically not dependent on traffic flowing through the firewall. Such events are mostly flow (session/connection) related events.

System logs typically include, but are not limited to:

- Interface state change
- Fan failure
- User authentication
- HA failover and failback
- Tunnel negotiations
- System events such as configuration changes

Configuration options for this feature are on these pages:

- AppFlow > Flow Reporting > External Collector tab:

The screenshot shows the 'AppFlow / Flow Reporting' interface. At the top, there are buttons: 'Accept' (with a green checkmark), 'Cancel', 'Clear', and 'Default'. Below these are tabs: 'Statistics', 'Settings', 'GMSFlow Server', and 'External Collector' (which is selected). The main section is titled 'External Collector Settings'. It contains several configuration options:

- 'Send Flows and Real-Time Data To External Collector [*]' is checked.
- 'External Flow Reporting Format' is set to 'IPFIX with extensions'.
- 'External Collector's IP address' is '0.0.0.0'.
- 'Source IP To Use For Collector On A VPN tunnel' is '0.0.0.0'.
- 'External Collector's UDP Port Number' is '2055'.
- 'Send IPFIX/Netflow Templates At Regular Interval' is checked.
- 'Send Static AppFlow At Regular Interval' is checked.
- 'Send Static AppFlow For Following Tables' is set to 'Applications, Viruses, Spyware, Intrusions, Services, Rating Map'.
- 'Send Dynamic AppFlow For Following Tables' is set to 'Connections, Users, URLs, URL ratings, VPNs, VOIPs'.
- 'Include Following Additional Reports via IPFIX' is set to 'System Logs'. A dropdown menu is open, showing options: 'System Logs' (checked), 'Top 10 Apps', 'Interface Stats', 'Core utilization', and 'Memory utilization'.
- 'Report On Connection OPEN' is checked.
- 'Report On Connection CLOSE' is checked.
- 'Report Connection On Active Timeout' is checked.
- 'Report Connection On Kilo BYTES Exchanged' is checked.
- 'Report Connections On Following Updates' is checked.
- 'Actions' is set to 'Send Log Settings To External Collector'.

At the bottom right, there is a 'Send ONCE' button.

An important step is send log properties and some fields of log settings to the external collector. Make sure the connection between SonicOS and the external collector server is ready before clicking the **Send All Entries** button to send the settings.

Click the button again to sync the settings in the following cases:

- SonicOS is upgraded with some NEW added log events.
- The connection between SonicOS and the external server has been down for some time and log settings might have been edited in the period.
- **AppFlow > Flow Reporting > GMSFlow Server** tab:
Enable Logs in the **Include Following Additional Reports via IPFIX** drop-down list.
Click the **Synchronize Log Settings** button when ready.
- **AppFlow > Flow Reporting > AppFlow Server** tab:
Enable Logs in the **Include Following Additional Reports via IPFIX** drop-down list.
Click the **Synchronize Log Settings** button when ready.

NAT64: Stateful NAT from IPv6 Client to IPv4 Server

As a NAT64 translator, SonicOS 6.2.7.0 allows an IPv6-only client from any zone to initiate communications to an IPv4-only server with proper route configuration. It maps IPv6 addresses to IPv4 addresses so that IPv6 traffic changes to IPv4 traffic and vice versa. IPv6 address pools (represented as Address Objects) and IPv4 address pools are created to allow the mapping. An IP/ICMP translation algorithm is implemented to translate packet headers between IPv6 and IPv4. The IPv4 addresses of IPv4 hosts are translated to and from IPv6 addresses by using an IPv6 prefix configured in SonicOS. A DNS64 server is configured in the IPv6-only client, which creates AAAA records (IPv6 records) with A records (IPv4 records). SonicOS does not act as a DNS64 server.

This feature provides a way for administrators to configure a NAT64 policy in the same way as a regular NAT policy. In the policy, by configuring translated destination to Original in a 6to4 policy, SonicOS will automatically translate IPv4-converted IPv6 addresses to IPv4 addresses. When adding a policy from the **Network > NAT Policies** page, select **NAT64 Only** for the **IP Version** field.

SONICWALL Network Security Appliance

General

NAT Policy Settings

IPv6 Original Source: --Select an address object --

Translated IPv4 Source: --Select an address object --

Pref64: --Select an address object --

Translated Destination: Embedded IPv4 Address

Original Service: ICMP UDP TCP

Translated Service: Original

Inbound Interface: Any

Outbound Interface: Any

Comment:

IP Version: ☐ IPv4 Only ☐ IPv6 Only ☒ NAT64 Only

☒ Enable NAT Policy


☐ Create a reflexive policy

In SonicOS, an Address Object of Network type can be configured to represent all addresses with **pref64::/n** to represent all IPv6 client which can do NAT64. **Pref64::/n** defines a source network which can go from an IPv6-only client through NAT64 to an IPv4-only client.



A well-known prefix, **64:ff9b::/96**, is auto created by SonicOS.

Packets from an IPv6 client are originally from the LAN zone, but appear to be from the WAN zone after being translated by the NAT64 policy. To prevent SonicOS from dropping these packets in some cases, a new WAN to WAN allow rule policy should be created, such as:

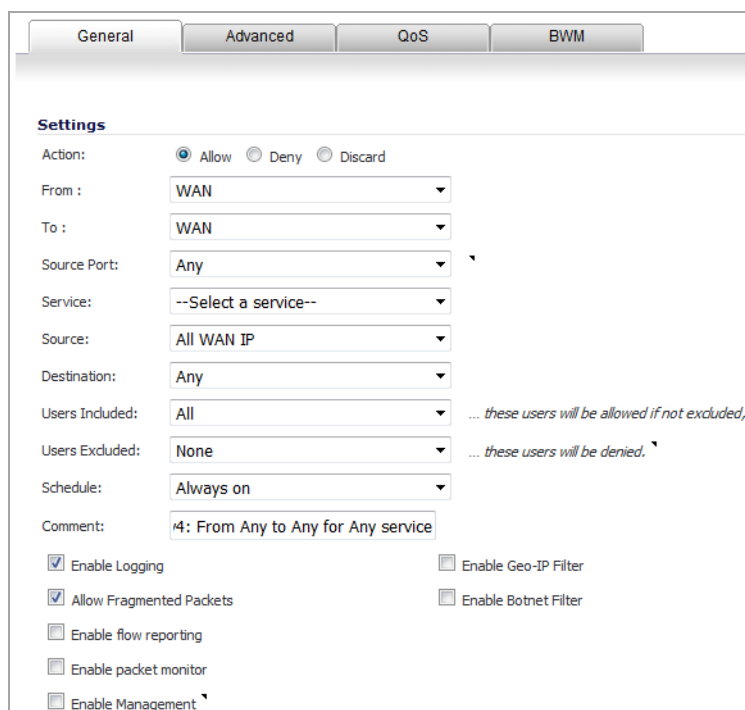

Notes:


- NAT64 currently only translates unicast packets carrying TCP, UDP, and ICMP traffic.
- NAT64 currently supports FTP and TFTP application layer protocol streams. It currently does not support the H.323, MSN, Oracle, PPTP, RTSP, and RealAudio application layer protocol streams.
- NAT64 currently does not support IPv4-initiated communications to a subset of IPv6 hosts.

DNS Proxy

SonicOS 6.2.7.0 supports DNS proxy to allow IPv4 clients to access DNS services in a network with mixed IPv4 and IPv6.

In a normal deployment, an IPv4 interface can do name resolution on IPv4 internet, and an IPv6 interface can only do name resolution on IPv6 internet through DNS proxy.

A new page is added to the SonicOS web management interface, **Network > DNS Proxy**.

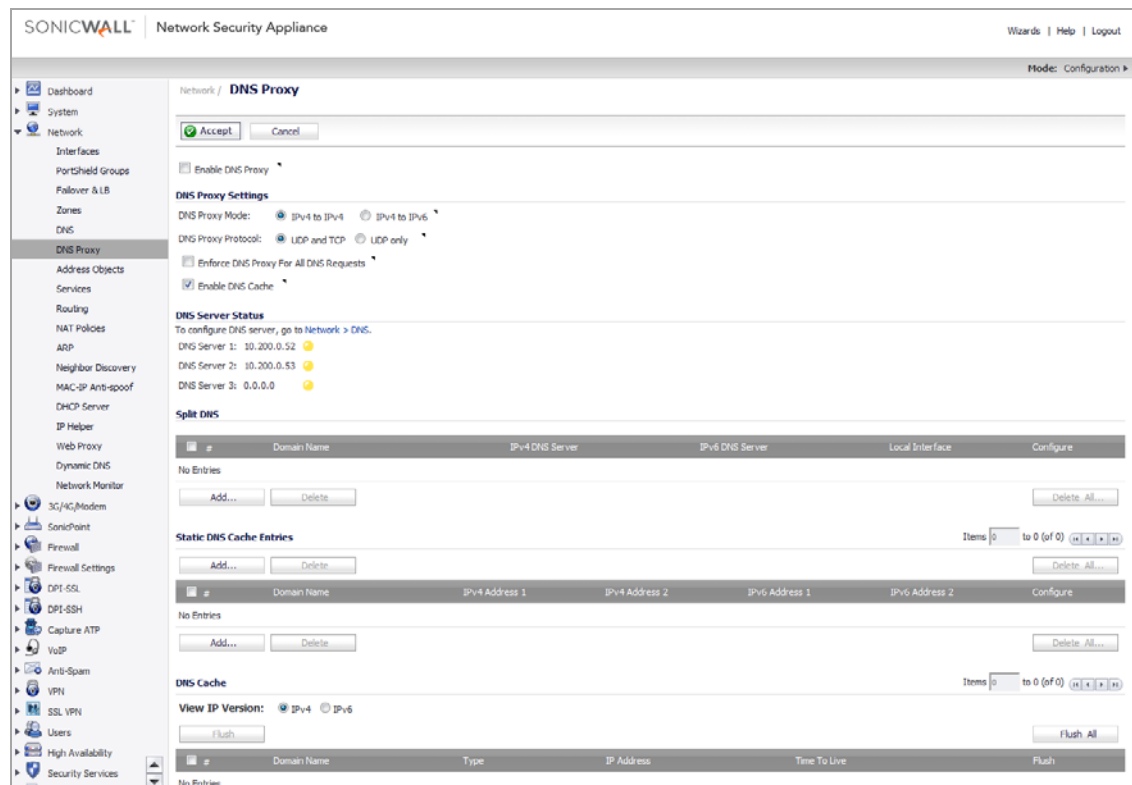

Select the **Enable DNS Proxy** checkbox to globally enable the feature.

There are two modes for DNS proxy: **IPv4 to IPv4**, and **IPv4 to IPv6**. The default mode is IPv4 to IPv6, meaning that the firewall redirects queries from clients to upstream IPv6 DNS servers. For IPv4 to IPv4, the firewall redirects the queries to upstream IPv4 DNS servers.

Default option on DNS proxy protocol is **UDP and TCP**, which means when DNS query is sent over TCP, it will be proxied and retransmitted to outside DNS servers over TCP.

The checkbox **Enforce DNS Proxy For All DNS Requests** is an enhanced option for DNS proxy. When the option is selected, other types of DNS queries will be hooked by the DNS proxy module, including stack DNS packets sent by SonicOS, and forwarding DNS queries with destination address of outside DNS servers.

Interface Configuration and Allow Rules

SonicOS 6.2.7.0 supports the DNS proxy feature on physical interface, VLAN interface, or VLAN trunk interface, and the zone for each interface can only be LAN, DMZ or WLAN.

In the **Advanced** tab of the interface configuration page, there is a checkbox named **Enable DNS Proxy** when the interface permits configuring DNS proxy.

When DNS proxy is enabled on an interface, one Allow Rule is auto-added by SonicOS for UDP with the settings: From the interface to the interface, source with any and destination with the interface IP, service with DNS, and enable management. When **DNS Proxy over TCP** is enabled, another Allow Rule is auto-added.

DHCP

When DNS proxy is enabled on an interface, the device needs to push the interface IP as DNS server address to clients, so the SonicOS administrator needs to configure the DHCP server manually and use the interface address as the **DNS Server 1** address in the DHCP server settings on the **DNS/WINS** tab. The **Interface Pre-populate** check box in the DHCP page makes this easy to configure; if the selected interface has enabled DNS proxy, the DNS server IP is auto-added into the **DNS/WINS** page.

DNS Cache

In the **Network-> DNS Proxy** page, the DNS Cache function can be enabled by selecting the **Enable DNS Cache** checkbox; the default setting is enabled.

When enabling the function, SonicOS caches the answers from DNS responses during the DNS Proxy process, and will directly respond to clients if a subsequent DNS query matches the DNS cache.

There are two kinds of DNS cache: static DNS cache and dynamic DNS cache. Static DNS cache means that it can be manually created and edited by users, and never expires. Dynamic DNS cache is added automatically during the DNS proxy process, and it is displayed only in the whole DNS cache table. Its type is Dynamic, and has TTL value. Dynamic DNS cache can be flushed by the administrator.

Split DNS

Split DNS is an enhancement for DNS proxy, which allows the administrator to configure a set of name servers and associate them to a given domain name (can be wildcard). When SonicOS receives a query that matches the domain name, it will be transmitted to the designated DNS server.

FQDN Routing

SonicOS 6.2.7.0 introduces Fully Qualified Domain Name (FQDN) support in Policy-based routing (PBR). The FQDN can be used as the source or destination of the PBR entry, and the PBR entry can be redistributed to advanced routing protocols.

Policy-based routing is a technique used to make routing decisions based on policies set by the network administrator. Policy-based routing may be based on the size of the packet, the source address, the protocol of the payload, or other information available in a packet header or payload.

The FQDN is added as an address object, which can then be used when configuring the policy. The FQDN object can contain both IPv4 and IPv6 hosts; the number of hosts in an FQDN object is variable. To configure an FQDN address object, select **FQDN** in the **Type** field and fill in the other fields.

The screenshot shows the 'Add New' dialog box in the SonicWall Network Security Appliance interface. The title bar reads 'SONICWALL | Network Security Appliance'. The form contains the following fields and options:

- Name:** A text input field.
- Zone Assignment:** A dropdown menu with 'DMZ' selected.
- Type:** A dropdown menu with 'FQDN' selected.
- FQDN Hostname:** A text input field.
- Manually set DNS entries' TTL:** A checkbox that is unchecked, followed by a text input field containing '(120~86400s)'.
- Status:** A text box displaying 'Ready'.
- Buttons:** 'Add' and 'Close' buttons at the bottom right.

Maximum Routes Doubled

This feature doubles the maximum number of static and dynamic routes supported by SonicOS. All platforms should maintain reasonable performance while adapting to dynamic routing changes when the maximum number of dynamic and static routes has been exploited. The SonicOS web management interface might respond more slowly during the adaptation period.

The TSR displays the maximum static and dynamic routes.

Maximum Zone to Zone Access Rules Increased

Previous versions of SonicOS do not allow the administrator to increase or decrease the Rule Table size. The Rule Table size for all the Zone-Zone pairs is fixed to a constant value based on the platform.

SonicOS 6.2.7.0 allows flexible Rule Table size for every Zone-Zone pair. The **Firewall > Access Rules** page is refreshed and has a layout similar to the **Firewall > Address Objects** page. The selected Zone-Zone rule table size is configured on the **Firewall > Access Rules** page.

Maximum Policies

| Platform | Max Size per Zone-Zone Rule Table |
|------------------------------|-----------------------------------|
| SuperMassive 9200/9400/9600 | 5000 rules |
| NSA 2600/3600/4600/5600/6600 | 2500 rules |
| TZ 300/400/500/600 Series | 1250 rules |
| SOHO Wireless | 250 rules |

Flow Reporting using IPFIX Extension Version 2

SonicOS 6.2.7.0 introduces support for IPFIX with Extension v2. The flow reporting format to the GMS Flow Server (collector) in earlier SonicOS versions uses the IPFIX with Extension format (version 1) by default. In SonicOS 6.2.7, you can customize flow reporting to report in either IPFIX with Extension (v1) or IPFIX with Extension v2.

The new format uses variable length fields, which is much more memory efficient than sending static fields and will vastly reduce the amount of information transmitted over the network.

In IPFIX with Extension v2, many new fields have been added to convey more information about the firewall, and some redundant or unnecessary fields have been removed. The additional data in these new fields will enrich the GMS Flow Server's visualization capabilities. The GMS Flow Server supports the IPFIX with Extension v2 format beginning in SonicWall GMS 8.3. SonicWall GMS 8.2 or earlier releases only support the IPFIX with Extension (v1) format.

The administrator can select **IPFIX with Extension v2** for the **GMS FS Reporting Format** option in the **AppFlow > Flow Reporting** page, **GMSFlow Server** tab. A similar option is added on the **AppFlow Server** tab. To see these fields, you must enable an internal setting. Contact SonicWall Support for information about how to enable this. See <https://support.sonicwall.com/contact-support> for Support phone numbers.

Syslog Server Profiling

This feature provides the ability to configure the settings for each Syslog server independently instead of using the global settings for all the servers. In previous releases, the events generated from all the modules in the system are reported to **all** the configured Syslog servers. Depending on the deployment, this generates a huge amount of Syslog traffic and can cause performance issues or even packet loss.

With Syslog Server Profiling, the following new functionality is available:


- Syslog messages can be sent using different settings for different Syslog servers

- There can be multiple groups of Syslog servers
- Different events can be configured to be reported to different groups of Syslog servers

All the settings in the **Log > Syslog** page except the **Enable NDPP Enforcement for Syslog Server** checkbox can now be configured for each row independently in the **Syslog Servers** table. This allows the Syslog messages to be rendered with different settings for different servers and each server can have its own Rate Limiting options.

The newly added **Enable** checkbox can be used to enable or disable sending of Syslog messages to a specific Syslog server. The settings for Enhanced Syslog and ArcSight format can also be configured individually and the corresponding buttons are shown in the **Log > Syslog** page.

All these settings can be configured from the SonicOS web interface and from the command line interface (CLI.) For convenience, the global settings can be used to configure all servers.

 **NOTE:** The **Override Syslog Settings with Reporting Software Settings** option has been removed. Since the Syslog servers can have their own independent settings, this option is no longer needed.

Event Profile

The Event Profile is an integer and can range from 0 to 23. It can be used to combine multiple Syslog servers into a group. All Syslog servers in the group have the same Profile. There can be a maximum of 24 groups (0 to 23) and seven Syslog servers per group. Therefore, in total there can be a maximum of 168 Syslog servers.

A new column called **Event Profile** is added to the **Syslog Servers** table. This new field also belongs to the group key in addition to server name and port. So, instead of <Name, Port>, a <Name, Port, Profile> combination must be unique for each row in the **Syslog Servers** table. This allows multiple rows to have same <Name, Port> combination with different Profiles. This means one Syslog server can be part of multiple groups, if necessary.

The events in the **Log > Settings** page also have a configurable Event Profile. The Event Profile of an event can be set to any available group, causing the Syslog messages for that event to be sent only to that group of servers. If the Event Profile of an event is set to a group that does not exist in the **Syslog Servers** table, then no Syslog messages for that event are sent.

GMS

The GMS server has a fixed Syslog Facility (Local Use 0), Syslog Format (Default), and Server ID (firewall). Although the Event Profile value for GMS is set to 0 by default, all events are reported to GMS irrespective of the profile. GMS is also exempted from Rate Limiting. The newly added **Enable** checkbox does not apply. GMS can be enabled/disabled only in the **System > Administration** page and not in the **Log > Syslog** page.

When GMS is enabled, the GMS server is added to the Event Profile 0 group in the **Syslog Servers** table. It cannot be added to any other Profile groups. Therefore, only the Profile 0 group can have 8 servers in total (7 Syslog servers and 1 GMS server). All other groups can have only 7 servers. The events in the GMS group in the **Log > Settings** page have Profile 0 and cannot be changed. Other events can have a different Profile.

IPv6 Support

In SonicOS 6.2.7.0, IPv6 is supported on a number of additional features, as shown in this section.

SSL Control

SonicOS 6.2.7.0 introduces IPv6 support for SSL Control. No new options or settings have been added. Both IPv4 and IPv6 network traffic is inspected based on the settings in the **Firewall Settings > SSL Control** page.

IPv6 DPI-SSL

SonicOS 6.2.7.0 introduces IPv6 support for DPI-SSL. No new options or settings have been added. The settings on the **DPI-SSL > Client SSL** and **DPI-SSL > Server SSL** pages are now applied to both IPv4 and IPv6 network traffic.

IPv6 NTP

SonicOS 6.2.7.0 introduces support for NTP servers with IPv6 domain names or IP addresses. Administrators can now add IPv6 NTP servers in the **NTP Settings** section of the **System > Time** page.

IPv6 DNS

SonicOS 6.2.7.0 introduces IPv6 support for DNS.

To communicate with an IPv6 DNS server, first go to **Network > Interfaces** and configure a WAN interface with an IPv6 address, either as a static IP or through DHCPv6.

Then on the **Network > DNS** page, select the **IPv6** radio button for **View IP Version**. The display changes to allow input of IPv6 DNS server addresses, which can be entered manually or obtained dynamically from the WAN zone. Select the **Prefer IPv6 DNS Servers** checkbox to make SonicOS send DNS requests to the IPv6 DNS servers first, and if that fails, send the request to the configured IPv4 DNS servers.

The **DNS Name Lookup** diagnostic tool on the **System > Diagnostics** page can be used to test the DNS servers. All four DNS diagnostic tools in previous releases are now integrated into **DNS Name Lookup**.

IPv6 MAC Address Object

SonicOS 6.2.7.0 introduces IPv6 support for MAC address objects. A MAC address object (AO) binds to the dynamic memory of host IP addresses. It is often used when defining access rules.

To create an IPv6 MAC AO, go to the **Network > Address Objects** page and click **Add**. Then select **MAC** in the **Type** field and enter the IPv6 MAC address in the **MAC Address** field. The configuration is basically the same as for an IPv4 MAC AO; no new options or settings have been added for configuring an IPv6 MAC AO.

IPv6 FQDN Address Object

SonicOS 6.2.7.0 introduces IPv6 support for FQDN address objects.

First, configure an IPv6 DNS server on the **Network > DNS** page. See [IPv6 DNS](#) for more information about this configuration.

To create an IPv6 FQDN AO, go to the **Network > Address Objects** page and click **Add**. Then select **FQDN** in the **Type** field and enter the IPv6 FQDN hostname in the **FQDN Hostname** field. The configuration is basically the same as for an IPv4 FQDN AO; no new options or settings have been added for configuring an IPv6 FQDN AO.

DPI-SSL Increased Connection Counts and Enhancements

SonicOS 6.2.7.0 increases the number of DPI-SSL connections available on TZ500 Series and TZ600 appliances.

In addition to the increase in connection counts, this feature provides the following enhancements for all platforms:

- Stability fixes related to race conditions
- Re-design of the initialization sequence
- Caching (both Session cache and Spoof cache) enhancements and optimizations

- Memory footprint reduction per connection leading to increased connection counts

Open Authentication Social Login

SonicOS 6.2.7.0 introduces support for Open Authentication Social Login.

Social Login

Also known as social sign-in, social login is a form of single sign-on using existing information from a social networking service such as Facebook, Twitter, or Google Plus to sign into a third party website instead of creating a new login account specifically for that website.

Open Authentication (OAuth)


OAuth is an open standard for authorization. OAuth provides client applications a secure delegated access to server resources on behalf of a resource owner. It specifies a process for resource owners to authorize third-party access to their server resources without sharing their credentials.

OAuth Social Login is supported on SonicWall firewalls with internal wireless and SonicPoint, in the scope of wireless zone guest services. Wireless guest services are widely used in public WiFi hotspots and corporate WiFi for guests.

Facebook, Twitter, and Google Plus are supported in SonicOS 6.2.7.0. Within the SonicOS scope, social login is supported for wireless guests, not for SonicOS administrator login.

NOTE: Read the Open Authentication Social Login guidance from FaceBook/Google/Twitter and SonicWall before enabling this feature.

External Authentication Server Topology

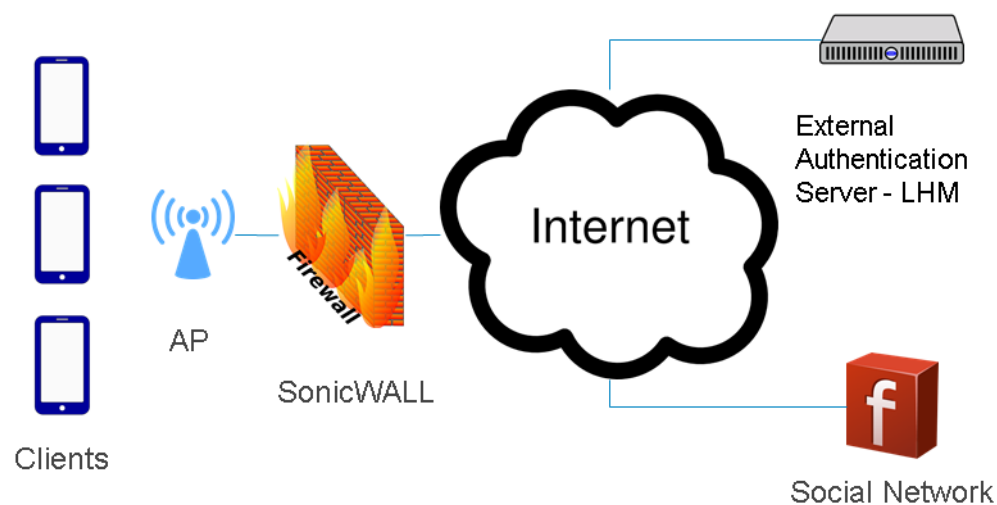

SonicOS Settings

To enable social login in SonicOS:

- 1 Edit the WLAN zone and click the **Guest Services** tab.
- 2 Select the **Enable Guest Services** and **Enable External Guest Authentication** checkboxes.
- 3 Click **Configure** next to the **Enable External Guest Authentication** checkbox.
- 4 In the **Social Network Login** section on the **General** tab of the popup dialog, select the **Social Network Login** checkbox and then select one or more of the **Facebook**, **Google**, or **Twitter** checkboxes.
- 5 On the **Auth Pages** tab, enter the desired page name such as **login.php** in the **Login Page** field.

6 Click **OK**.

SonicOS automatically creates the necessary pass network domains for allowing authentication process traffic between the authentication server and the user. The automatically added address object group is named **Default Social Login Pass Group**. This address object group is appended to the current configured pass networks, if any, or added into a new group named **Social Login Pass Group**. The **Network > Address Objects** page shows these entries.

Facebook Settings

The screenshot shows the 'facebook for developers' interface. The left sidebar contains a menu with 'Dashboard', 'Settings' (highlighted), 'App Review', 'App Details', 'Roles', 'Open Graph', 'Alerts', and 'Localize'. The main content area has three tabs: 'Basic', 'Advanced', and 'Migrations'. Under the 'Basic' tab, there are fields for 'App ID' (857800884333318), 'App Secret' (masked with dots and a 'Show' button), 'Display Name' (Dell SonicWALL Hotspot), 'Namespace' (empty), 'App Domains' (amazonaws.com, highlighted with a yellow circle), and 'Contact Email' (redacted). Below these is a 'Website' section with a 'Quick Start' button and a 'Site URL' field (http://amazonaws.com/, highlighted with a yellow circle).

The 'Client OAuth Settings' dialog box contains three sections: 'Client OAuth Login' (Yes), 'Web OAuth Login' (Yes), and 'Embedded Browser OAuth Login' (No). Each section has a brief description. At the bottom, there is a 'Valid OAuth redirect URIs' field containing the URL 'http://ec2-54-149-208-253.us-west-2.compute.amazonaws.com/facebookCallback.php'.

SonicPoint Radius Accounting

SonicOS 6.2.7.0 introduces support for Radius Accounting on SonicWall firewalls with a connected SonicPoint ACe, ACi, or N2, in the scope of IEEE 802.11i Enterprise Authentication.


Radius Accounting uses the RADIUS protocol to deliver accounting information from a Network Access Server (NAS, a SonicPoint in our case) to the Radius Accounting Server (RAS). The SonicOS administrator can use the accounting information to apply various billing rules on the Radius Accounting server side, based on session duration time or traffic load being transferred for each individual user. Radius Accounting is the process of collecting and storing the information contained in the following system messages:

- Accounting-Start
- Accounting-Stop

SonicOS Settings

To configure Radius Accounting:

- 1 On the **SonicPoint > SonicPoints** page, click the **Configure** button for your SonicPoint.

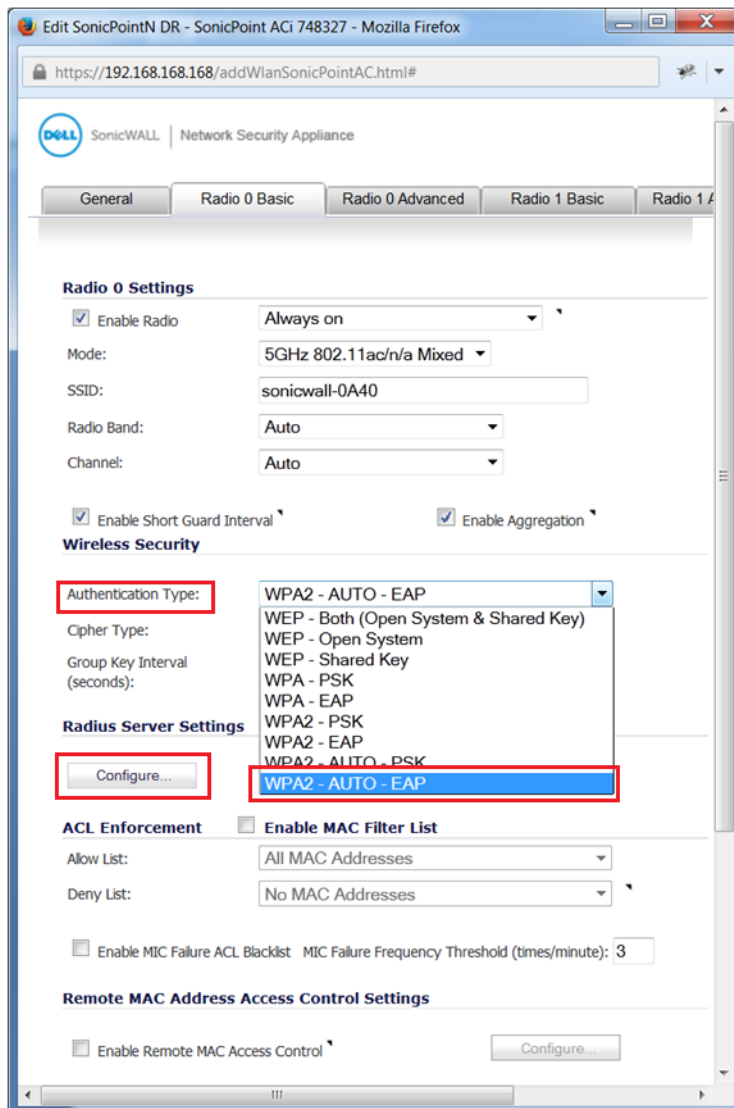

- 2 Under **Radius Server Settings**, click **Configure**.

- 3 In the configuration dialog, enter the correct **IP**, **Port**, and **Secret** (password) for the Radius Accounting Server and Radius (Authentication) server.



NOTE: The Radius Accounting Server and Radius (Authentication) Server do not need to be located at the same IP.

- 4 Click **OK** to provision the SonicPoint ACe/ACi/N2.

Radius Server Settings

The Radius Server needs to be configured accordingly to turn on accounting support.

To configure freeradius 2.1.10 fto turn on accounting support:

- 1 Add the Radius client entry into the file `/etc/freeradius/clients.conf`:

```
Client 10.103.12.192 {  
    Secret= "password"  
}
```

NOTE: 10.103.12.192 is the WAN IP of the SonicWall Gateway from which the Radius Server can be reached.

- 2 Add the user information into the file `/etc/freeradius/users`:

```
user_name    Cleartext-Password := "password"
```

- 3 Run the command `sudo freeradius -X` in the terminal to start freeradius.

31-Bit Network

SonicOS 6.2.7.0 introduces support for RFC 3021, which defines the use of a 31-bit subnet mask. This mask allows only two host addresses in the subnet, with no “network” or “gateway” address and no broadcast address. Such a configuration can be used within a larger network to connect two hosts with a point-to-point link. The savings in address space resulting from this change is easily seen, each point-to-point link in a large network would consume two addresses instead of four.

In this context, the point-to-point link is not equivalent to PPP (point to point protocol). The point-to-point link using a 31-bit mask can use or not use the PPP protocol. 31-bit prefixed IPv4 addresses on a point-to-point link can also be used in the Ethernet network.

Configuring SonicOS

To configure an interface for a 31-bit subnet:

- 1 On the **Network > Interfaces** page, edit the desired interface.
- 2 Set the **Subnet Mask** to **255.255.255.254**.

General Advanced

Interface 'X2' Settings

Zone: WAN

IP Assignment: Static

IP Address: 10.5.10.121

Subnet Mask: 255.255.255.254

Default Gateway: 10.5.10.120

DNS Server 1: 8.8.8.8

DNS Server 2: 0.0.0.0

DNS Server 3: 0.0.0.0

Comment:


Management: ☐ HTTPS ☒ Ping ☐ SNMP ☐ SSH

User Login: ☐ HTTP ☐ HTTPS

☐ Add rule to enable redirect from HTTP to HTTPS

- 3 Enter one host IP address into the **IP Address** field.
- 4 Enter the other host IP address into the **Default Gateway** field.
- 5 Set the other fields according to your network, as needed.
- 6 Click **OK**.

Example Network Environment

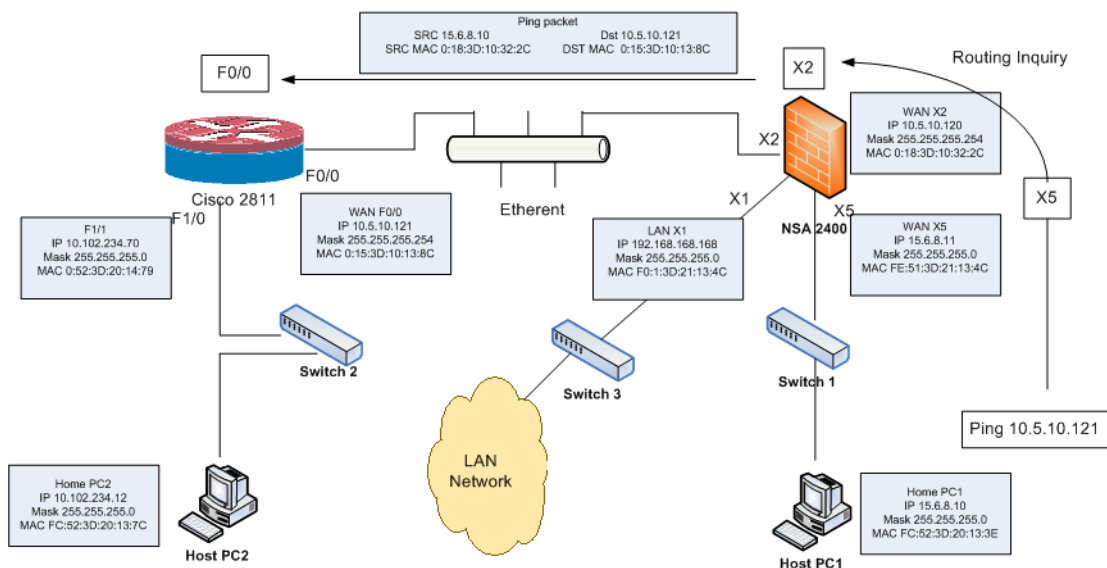

In this network environment, Host PC1 and Host PC2 can use visit each other, while hosts in the LAN network can visit Host PC2.

To configure settings for this environment:

- 1 For Host PC1, add two route entries:
 - `Route add 10.5.10.0 mask 255.255.255.0 15.6.8.10`
 - `Route add 10.102.234.0 mask 255.255.255.0 15.6.8.10`
- 2 For Host PC2, add two route entries:
 - `Route add 10.5.10.0 mask 255.255.255.0 10.102.234.70`
 - `Route add 15.6.8.0 mask 255.255.255.0 10.102.234.70`
- 3 On the Cisco router (F0/0):
 - `interface fastEthernet 0/0`
 - `ip address 10.5.10.120 255.255.255.254`
- 4 On the Cisco 2811, add one route entry:

```
!  
ip route 15.6.8.0 255.255.255.0 10.5.10.120  
!
```
- 5 On the firewall, add one route entry to enable the WAN zone data flow from X2 to X5, and X5 to X2:

```
Any      10.102.234.0      Any      X2 Default Gateway      X2
```

RESTful API

SonicOS 6.2.7.0 introduces support for a RESTful API. The SonicOS RESTful API provides API access to SonicWall firewall services. Compared with current firewall GUI/CLI user interfaces, the RESTful API is simple and makes good use of the standard HTTP protocol. With the trend toward cloud deployment, the RESTful API can more easily be used than the traditional SonicOS GUI/CLI.

The key principles of REST involve separating the API into logical resources. These resources are manipulated using HTTP requests where the method (GET, POST, PUT, PATCH, and DELETE) has specific meaning.

The SonicOS REST-like API is our implementation which relies on the current ECLI system to do the final configuration. Using a one-to-one mapping from the API to GUI configuration and related ECLI commands allows the solution to work like the user is entering the related commands in the console.

In the initial implementation, SonicWall partner Cyphort can use our RESTful API layer to allow the Cyphort system to act as a RESTful client and communicate with a SonicWall firewall. Currently Cyphort provides a detection-only APT solution and is integrating with SonicWall firewalls to be able to push rules through the API such as, “block all downloads coming from this URL”.

Biometric Authentication

SonicOS 6.2.7.0 introduces support for biometric authentication in conjunction with SonicWall Mobile Connect.

Mobile Connect is an app that allows users to securely access private networks from a mobile device. Mobile Connect 4.0 supports using finger touch for authentication as a substitute for username and password.

SonicOS 6.2.7.0 provides configuration settings on the **SSL VPN > Client Settings** page to allow this method of authentication when using Mobile Connect to connect to the firewall.

To enable biometric authentication:

- 1 On the **SSL VPN > Client Settings** page, click the Configure button for the **Default Device Profile**.

- 2 On the **Client Settings** tab, select **Enabled** for one or both of the following settings:
 - **Allow Touch ID on iOS devices**
 - **Allow Fingerprint Authentication on Android devices**
- 3 On the client smartphone or other mobile device, enable Touch ID (iOS) or Fingerprint Authentication (Android).

Ensure that Mobile Connect 4.0 or higher is installed on the mobile device, and configure it to connect with the firewall.

EasyVPN

SonicOS 6.2.7.0 introduces the EasyVPN feature. This feature provides automatic VPN provisioning for box-to-box hub-and-spoke configurations. The user experience is similar to that seen when using SonicWall Global VPN Client to connect from a client machine to a firewall, in which none of the complexity is visible to the user.

Minimally, only two pieces of information are required to configure a spoke appliance doing EasyVPN:

- The peer gateway address or domain name
- The machine authentication credentials

By selecting the **Default Provisioning Key** option, machine authentication credentials can be based on a default value known to all the appliances. To increase security, user level credentials may also be required.

EasyVPN can be used when adding a VPN Policy in the **VPN > Settings** page. In the Add dialog under **Security Policy**, select either:

- **SonicWall Auto Provisioning Client**

The screenshot shows the 'Security Policy' configuration page for the 'SonicWall Auto Provisioning Client'. The page is divided into three main sections: 'Authentication Method', 'SonicWall Settings', and 'User Settings'.

- Authentication Method:** A dropdown menu is set to 'SonicWall Auto Provisioning Client'. Below it are input fields for 'Name' and 'IPsec Primary Gateway Name or Address'. The 'Authentication Method' is set to 'Preshared Secret' (selected with a radio button) and 'Certificate' (unselected).
- SonicWall Settings:** This section includes a 'VPN AP Client ID' input field, a checkbox for 'Use Default Provisioning Key' (unchecked), a 'Shared Secret' input field, a 'Confirm Shared Secret' input field, and a checkbox for 'Mask Shared Secret' (checked).
- User Settings:** This section includes a 'User Name' input field with the value 'admin', a 'User Password' input field with masked characters, and a 'Confirm User Password' input field. A checkbox for 'Mask User Password' is checked.

- **SonicWall Auto Provisioning Server**

- 4 Configure the other fields as needed.

Resolved Issues

This section provides a list of resolved issues in this release.

Log

| Resolved issue | Issue ID |
|--|----------|
| The Analyzer Server format should be Default format just like GMS. | 181167 |

Networking

| Resolved issue | Issue ID |
|--|----------|
| A NAT64 policy is auto-deleted after its priority is changed. | 181457 |
| A MAC Address Object that disables the Multi-homed host resolves IPv4 or IPv6 hosts incorrectly. | 181509 |
| Traffic matching a NAT64 policy from a VLAN interface fails due to being dropped with the message, "Packet on invalid VLAN". | 181544 |
| The traffic is unreachable when the MTU of a WAN interface is less 1500 and traffic is sent with packet size larger than the MTU but less than 1500. | 181570 |
| An Address Object type will become a host when editing a Network/Range type AO. | 181730 |

SonicPoint

| Resolved issue | Issue ID |
|--|----------|
| A SonicPoint ACe becomes non-responsive after some time. | 181758 |

Switching / X-Series

| Resolved issue | Issue ID |
|--|----------|
| A configuration mismatch occurs between the firewall and switch after trying to PortShield a switch port to an appliance interface over a dedicated uplink when the interface has a VLAN configured that overlaps with a VLAN configured on the common uplink interface. | 181091 |
| Overlapping VLANs can be configured under common uplinks of different switches. | 181132 |
| In a deployment with High Availability plus Common uplink topology, traffic does not resume after failing over to the secondary firewall. | 181229 |
| Powering down an X1052 switch causes an unexpected failover. | 181698 |
| Clicking the configure button for an unassigned firewall uplink interface opens the Add Zone popup window. | 181859 |

System

| Resolved issue | Issue ID |
|--|----------|
| A custom added Network Monitor policy is spontaneously deleted after being modified. | 181801 |

VPN

| Resolved issue | Issue ID |
|---|----------|
| After switching from Tunnel Interface to Auto-Provisioned Client Policy, the tunnel does not come up. | 181062 |

Wireless

| Resolved issue | Issue ID |
|--|----------|
| Wireless social login pass networks in guest service zone settings cannot be modified. | 181177 |

Issues Resolved in Previous Beta Releases

The following issues were resolved in previous Beta firmware versions.

3G/4G

| Resolved issue | Issue ID |
|---|----------|
| A Sprint 341U card takes more than 10 minutes to connect. | 166381 |
| Occurs when the Sprint 341U is connected to U0, which is configured as the Final Backup with a 4G profile, and then failover from the Primary WAN (X1) is triggered by unplugging the cable from X1. | |

Bandwidth Management

| Resolved issue | Issue ID |
|--|----------|
| An Advanced BWM policy works for egress traffic, but not for ingress traffic. | 178292 |
| Occurs when two SonicPoints are connected to the same firewall interface and Advanced BWM policies are configured for both egress and ingress traffic between wireless clients of the two SonicPoints. | |

Networking

| Resolved issue | Issue ID |
|---|----------|
| There is no option to originate a default route for dynamic IPv6 routing via OSPFv3. Occurs when configuring OSPFv3 from the Network > Routing page. IPv6 default route origination via OSPFv3 is currently not supported. | 150771 |

SSL-VPN

| Resolved issue | Issue ID |
|---|----------|
| NetExtender cannot establish a connection from a client machine to the firewall. Occurs when the SYN Flood Protection Mode option under Firewall Settings > Flood Protection is set to Always proxy WAN client connections . | 178937 |

Users

| Resolved issue | Issue ID |
|--|----------|
| RADIUS or LDAP authenticated user sessions remain active after clicking the Logout button. Occurs when a user on the LAN side attempts to access the Internet through the firewall and logs in when the login redirect window is displayed and then clicks the Logout button. When the Users > Status page is checked, the Active User Sessions table still shows the user session as active, and the user can continue to access the Internet from the same computer without being required to log in again. | 175765 |

Known Issues

This section provides a list of known issues in this release.

3G/4G

| Known issue | Issue ID |
|---------------------------------|----------|
| The Huawei E353 cannot connect. | 181685 |

High Availability

| Known issue | Issue ID |
|---|----------|
| It is not possible to force a failover, either with the method provided in the SonicOS UI or on the command line (CLI). Occurs when clicking the "Force Active/Standby Failover" button on the High Availability > Advanced page, or when trying the CLI command "'force-failover'". | 182875 |
| Default route is wrong in secondary unit when X1 is in DHCP mode. | 181265 |

Log

| Known issue | Issue ID |
|--|----------|
| On the Dashboard > Log Monitor page, the Select Columns to Display option does not work and Log Monitor displays a "csrfToken missing" error whenever any new column is selected and the Apply or Restore Default buttons are clicked. | 182798 |
| The log message shows an incorrect application type of "General ICMP" when a web site is allowed by CFS. | 181999 |

Networking

| Known issue | Issue ID |
|---|----------|
| A newly added FQDN PBR route has a higher priority value than the default route when its metric ≥ 20 ; it should have a lower priority than the default route. | 182784 |
| The firewall does not handle traffic correctly due to many missing NAT policies. Occurs after upgrading the beta firmware from SonicOS 6.2.7.0-11n to 6.2.7.0-13n. | 182596 |

SonicPoint

| Known issue | Issue ID |
|---|----------|
| RADIUS Accounting fails with a SonicPoint NDR Access Point. | 181522 |

Switching / X-Series

| Known issue | Issue ID |
|---|----------|
| The parent interface of an interface already configured for port redundancy or link aggregation can incorrectly be configured as a firewall uplink. | 182845 |
| Re-adding a switch after deleting it throws an error and the switch becomes inaccessible. | 181357 |

System

| Known issue | Issue ID |
|---|----------|
| The new combined DNS Name Lookup diagnostic tool does not perform NetBIOS lookup. It should include this functionality which was previously provided by the Reverse Name Resolution tool, which is removed from System > Diagnostics tools in SonicOS 6.2.7. | 182904 |

VPN

| Known issue | Issue ID |
|--|----------|
| Phase 2 re-negotiation fails with "IKE Responder: IPsec proposal does not match (Phase 2)" after HA failover occurs and phase 2 lifetime expires. Occurs after an AP connection is established, then an HA failover occurs, and then the phase2 lifetime expires. | 182814 |
| The Tunnel cannot be negotiated if Auto-Provisioned Server uses a certificate with a wildcard. | 181322 |

System Compatibility

This section provides additional information about hardware and software compatibility with this release.

Wireless 3G/4G Broadband Devices

SonicOS 6.2.7.0 provides support for a wide variety of PC cards, USB devices and wireless service providers. For the most recent list of supported devices, see <http://www.sonicwall.com/supported-wireless-broadband-cards-devices/>.

GMS Support

SonicWall Global Management System (GMS) management of SonicWall security appliances running SonicOS 6.2.7.0 requires GMS 8.3 for management of firewalls using the new features in SonicOS 6.2.7.0. GMS 8.2 supports management of all other features in SonicOS 6.2.7.0 and earlier releases.


WXA Support

The SonicWall WXA series appliances (WXA 6000 Software, WXA 500 Live CD, WXA 5000 Virtual Appliance, WXA 2000/4000 Appliances) are supported for use with SonicWall security appliances running SonicOS 6.2.7.0. The recommended firmware version for the WXA series appliances is WXA 1.3.2.

Browser Support

SonicOS with Visualization uses advanced browser technologies such as HTML5, which are supported in most recent browsers. SonicWall recommends using the latest Chrome, Firefox, Internet Explorer, or Safari browsers for administration of SonicOS. This release supports the following Web browsers:

- Chrome 18.0 and higher (recommended browser for dashboard real-time graphics display)
- Firefox 16.0 and higher
- Internet Explorer 9.0 and higher
- Safari 5.0 and higher running on non-Windows machines

 **NOTE:** On Windows machines, Safari is not supported for SonicOS management.

 **NOTE:** Mobile device browsers are not recommended for SonicWall appliance system administration.

Product Licensing

SonicWall network security appliances must be registered on MySonicWall to enable full functionality and the benefits of SonicWall security services, firmware updates, and technical support. Log in or register for a MySonicWall account at <https://mysonicwall.com>.

Upgrading Information

For information about obtaining the latest firmware, upgrading the firmware image on your SonicWall appliance, and importing configuration settings from another appliance, see the *SonicOS 6.2 Upgrade Guide* available on MySonicWall at <https://mysonicwall.com> or on the Support portal at <https://support.sonicwall.com>.

SonicWall Support

Technical support is available to customers who have purchased SonicWall products with a valid support maintenance contract and to customers who have trial versions.

The Support Portal provides self-help tools you can use to solve problems quickly and independently, 24 hours a day, 365 days a year. To access the Support Portal, go to <https://support.sonicwall.com>.

The Support Portal enables you to:

- View knowledge base articles and technical documentation
- Download software
- View video tutorials
- Collaborate with peers and experts in user forums
- Get licensing assistance
- Access MySonicWall
- Learn about SonicWall professional services
- Register for training and certification

To contact SonicWall Support, visit <https://support.sonicwall.com/contact-support>.

Copyright © 2017 SonicWall Inc. All rights reserved.

This product is protected by U.S. and international copyright and intellectual property laws. SonicWall is a trademark or registered trademark of SonicWall Inc. and/or its affiliates in the U.S.A. and/or other countries. All other trademarks and registered trademarks are property of their respective owners.

The information in this document is provided in connection with SonicWall Inc. and/or its affiliates' products. No license, express or implied, by estoppel or otherwise, to any intellectual property right is granted by this document or in connection with the sale of SonicWall products. EXCEPT AS SET FORTH IN THE TERMS AND CONDITIONS AS SPECIFIED IN THE LICENSE AGREEMENT FOR THIS PRODUCT, SONICWALL AND/OR ITS AFFILIATES ASSUME NO LIABILITY WHATSOEVER AND DISCLAIMS ANY EXPRESS, IMPLIED OR STATUTORY WARRANTY RELATING TO ITS PRODUCTS INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR NON-INFRINGEMENT. IN NO EVENT SHALL SONICWALL AND/OR ITS AFFILIATES BE LIABLE FOR ANY DIRECT, INDIRECT, CONSEQUENTIAL, PUNITIVE, SPECIAL OR INCIDENTAL DAMAGES (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF PROFITS, BUSINESS INTERRUPTION OR LOSS OF INFORMATION) ARISING OUT OF THE USE OR INABILITY TO USE THIS DOCUMENT, EVEN IF SONICWALL AND/OR ITS AFFILIATES HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. SonicWall and/or its affiliates make no representations or warranties with respect to the accuracy or completeness of the contents of this document and reserve the right to make changes to specifications and product descriptions at any time without notice. SonicWall Inc. and/or its affiliates do not make any commitment to update the information contained in this document.

For more information, visit <https://www.sonicwall.com/legal/>.

Legend



WARNING: A WARNING icon indicates a potential for property damage, personal injury, or death.



CAUTION: A CAUTION icon indicates potential damage to hardware or loss of data if instructions are not followed.



IMPORTANT NOTE, NOTE, TIP, MOBILE, or VIDEO: An information icon indicates supporting information.

Last updated: 2/9/17

232-00xxxx-xx Rev 01